


IF YOU NEED AN ADAPTER, PLEASE USE THE FOLLOWING PICTURE AND TABLES TO DEFINE THE SUITABLE ADAPTER.

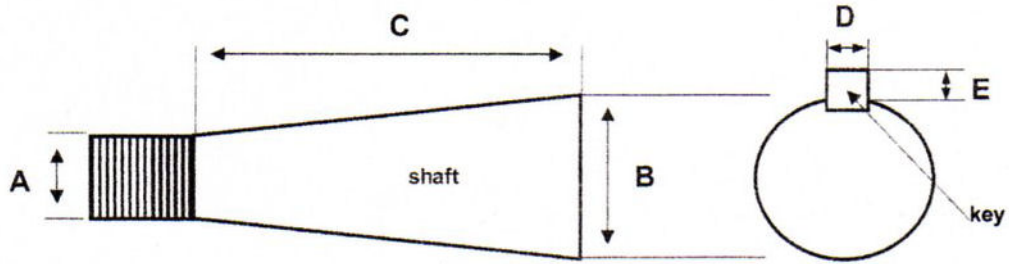

1= adaptor Delrin	3= bore in steering wheel with non adaptable hubs
2= adaptor Aluminium	4= adaptor stainless steel

A= front side shaft, B=rear side shaft, C= length of the shaft, D= width of the key, E= height of the key above the shaft

Ordernumber	Steering system	A size	B size	C size	D size	E size
-------------	-----------------	--------	--------	--------	--------	--------

Ordernumber	Type steering system	A size	B size	C size	D size	E size
-------------	----------------------	--------	--------	--------	--------	--------

Standard adapters

1: 75.10410 *	Federal1250/1350	17	19	25	5	3
2: 75.10510 *	Hynautic					
4: 75.10710	Kobelt 7031					
	Nauticomb LS 35/ 60/85/105/150/330					
	Tenfjord H28/45/58					
	Teleflex					
	Hydrive LS 430	17,3	19	25	5	3
	Wagner 700/701	17,4	19,5	25,5	5	3
1: 75.10420 *	M.T. 30/50	18	25	25	5	3
2: 75.10520 *	Whitlock					
4: 75.10720 *						
1: 75.10450 *	Cinkel	25,4	25,4	55	6,3	3,2
2: 75.10550 *	Edson	25,4	25,4	61	6,3	3,2
4: 75.10750 *	Satin	25	25,4	33	6,3	3,2
	Siltala	25,4	25,4	50	6,5	3
	Wagner B1/B2 B3/B4 incl. Spacer	25,4	25,4	51	6,3	3,5

Adaptors/bores with special bore in Hub

2: 75.10511 *	Blind 25 mm lang	0	0	25	0	0
1: 75.10412	Danfoss D 100 A	22,6	25	25	6	3
2: 75.10512						
1: 75.10413	Danfoss OTPB/	20,5	22	25	5	3
2: 75.10513	OSPB50/75/100/					
2:75.10514	Danfoss OSPB OSPC/125/200/315	23,2	24,6	25	5	3
1: 75.10416	Goyot	17,5	19,5	25	6	4
2: 75.10516						
1: 75.10417	Handpomp NS 28	18	18	35	5	3
2: 75.10517	incl.spacer					
3:75.10618	Handpomp NS 50/75 160	34	34	70	10	4
2:75.10570	Hydrive groot LS 431/432/531/532	19,7	22	26	6	3
3:75.10619	Hydrive LS 433	28	28	45	8	3,5
1:75.10433	M.T.P. 42 Vetus	17,6	19,6	31	5	3
2:75.10533						
1: 75.10432	Nauticat	17,2	19	21,7	5	3
2: 75.10532	with special ring					
1: 75.10444	Nauti style	25	25	25	6,3	4
2: 75.10544	incl.spacer					
1: 75.10421	Orbitrol klein	21,2	22,5	25	5	3
2: 75.10521						

Page 2 adapters/bores with special hubs

1: 75.10422	Servi E 185 F	18	18	40	6	3
2: 75.10522	incl. spacer					
1: 75.10423	Servi E 187 F/225F/	25	25	40	8	3,5
2: 75.10523	227F. incl. spacer					
1: 75.10424	Servi E 285/E 287	25	25	45	8	3,5
2: 75.10524	incl.spacer					
3:75.10625	Servi E405F/407F	30	30	58	10	4
1: 75.10426	Tenfjord H30S	17	22	25	5	3
2: 75.10526						
1: 75.10427	Tenfjord H 50	22	22	36	5	3
2: 75.10527	incl. spacer					
1: 75.10428	Tenfjord H 68	22	22	36	5	3
2:75.10528	incl. Spacer					
3:75.10629	Tenfjord H165/ H330	30	30	53	8	4
1: 75.10460 *	Prebored	10	10	25	0	0
2: 75.10560 *						
3:75.10631	Willes Ridley	31,8	31,8	51	8	4
1: 75.10430	STAZO konus 1	16	20	40	4	2
2: 75.10530						
1: 75.10440	STAZO konus 2	19	25	60	4	2
2: 75.10540						
3:75.10634	STAZO konus 3	23	30	70	6	2
3:75.10635	STAZO konus 4	27	35	80	8	2,5
1: 75.10471	Adaptor/ bore in accordance to your drawing					
2: 75.10571	smaller than 26 mm.					
3: 75.10671						
3:75.10641	Bore smaller than 40 mm, in accordance to specification					

STAZO steering wheels incorporate our unique adapter system to allow any wheel to fit almost any steering system.

Adapters are interchangeable and fit directly into the hub of the steering wheel.